

PRE-INSTALL DOCUMENT



This document is a series of recommendations and specifications for the installation of the Model T3 EXTREME welding machine. To ensure a smooth installation and optimal performance from your welder, please follow the recommendations and specifications precisely. Due to complications that may arise while under warranty, Miller Weldmaster Application Specialist will not install a welder into a site that is not adequately prepared. To avoid any postponements, please ensure that all requirements specified in this document are met before the Miller Weldmaster Application Specialist arrives.

Selection and preparation of a site suitable for the installation of the client's Miller Weldmaster welding system is the sole responsibility of the client. Miller Weldmaster Corporation offers the following advice and specifications as guidelines for site preparation. [The last page of this document is a PRE-SITE survey form that MUST be completed and signed by the client's authorized rep, and returned before installation can be scheduled.](#) Miller Weldmaster will advise any changes that may be required in your site preparation, and establish an installation schedule. We at Miller Weldmaster look forward to meeting your staff and ensure a successful installation and training.

Pre-Installation Document



1.0 Specifications

T3 Extreme	Machine crated (mm/kg)	Machine crated (in/lbs)
Height	661 mm	26 inches
Width	559 mm	22 inches
Length	1067 mm	42 inches
Weight	91 kg	200 lbs



2.0 Installation & Physical Plant Requirements

2.1 Physical Plant

If you would like assistance with the placement of your machine please email customerservice@weldmaster.com or fax to 330-837-2828 your work floor layout with dimensions. Be sure to include in your floor layout other pieces of machinery as well as power and air supply location. This will help with workflow concerns.

2.2 Environment

Because there is no RF energy associated with the T3 EXTREME, the distance specifications to electronics a protection. However, the potential for RF interference exists in high RF emitting environments.

2.3 Floor Plan

Actual floor space for maximum production capabilities is the desired goal. A table is not necessary but can be a useful tool. There should be at least 12" of space between the wall and the closed side of the machine. Most of the additional space should be allocated to an area in front & side of the welder. These are only suggested guidelines for the placement of the welder.



Pre-Installation Document

3.0 Power Requirements

The T3 EXTREME can accept the following power sources:

Warning: Only a qualified electrician should connect the electrical power and any local certifications above the normal electrical standards will be added at the expense of the customer.

16 amp – Single Phase	208 - 240 voltz, 50-60 Hz
-----------------------	---------------------------

The requirement for AMPS may vary depending on the amount of welding heads and other machine requirements. Consult your quotation for the exact amount required. If outside of the USA, your power configuration may vary and a power transformer may be required.

The welder is supplied with a suitable 16 AMP cable approximately 10ft (3M) in length. The cord will include a 20A - 250V plug. You may choose to have your cord hard-wired into your power supply. It is recommended that your electrician use a junction box with an on/off switch.



4.0 Compressed Air Requirements

3 cfm @ 120 psi	85 liters / min @ 8.3 Bar
-----------------	---------------------------

The T3 EXTREME does not need large volumes of compressed air, however some air is required to drive the pneumatics of the welder. Since these cylinders are activated and de-activated with bursts of air, a continuous volume of air is not needed. The Miller Weldmaster includes an in-shop air supply valve that allows for quick connects and disconnects to your shop air supply. Due to the number of different style airline connectors, a male quick connect is not included. You will want to select a male quick connect with a 1/4" NPT (National Pipe Thread) to match your female quick connect.

Pre-Installation Document



5.0 Shipping

When the welder arrives at your facility, inspect the welder and crate for signs of any damage that may have occurred during shipping and verify the package count against the packing slip. [Look for the Tip n Tell to see if the crate was mishandled.](#) If there is damage, file a complaint with the shipper and inform Miller Weldmaster immediately. If a damage situation arises, do not sign the shipping receipt of the carrier without documenting the details of the crate, machine etc. FURTHER, it is critical to take photos of the machine for damage compensation. If needed, schedule a freight inspector to be on site when the Miller Weldmaster Application Specialist arrives to install the system.

6.0 Training & Installation

6.1 Committing Time

In order for the training to be of any value, it needs the undivided attention of the operators and the uninterrupted use of the welder. This means that the operators must commit all their time during the training session, and not try to do other work on the side. It has been our experience that by designating one or two responsible employees to take an active role in not only training but also learning all aspects of the welder will ensure a better production life out of the welder. We understand that committing this amount of time can be very difficult in a production environment, but failing to do so can be costly. One full day for installation & training is what is usually required. It is a relatively small investment when compared to the machine down time and product waste that can occur when untrained operators are used. We will train on the basic functionality of the welder. However, rate of production and confidence with your welder will be greatly improved with practice by your staff. It is your responsibility to become familiar with the welder and its capabilities.

[Therefore, we request that you plan for a minimum of ONE full day when scheduling. The technician installing and training will speak English. The translation to your native language will be your responsibility.](#)

6.2 Minimum Materials Required for Training

The following is a list of materials required so that the maximum benefits of your training and installation can be met.

1. All different types of fabrics you will be seaming or plan to use in the future. (Most fabric suppliers will be glad to provide some sample material)
2. Enough material to run one or two hours worth of practice seams.
3. Enough material to make at least one of every product you produce.



Pre-Installation Document

6.3 Pre-seaming Considerations

The pre-seaming portion of the seaming process is very important to image quality and your overall profitability. Properly prepared pre-printed images (if you are seaming after printing), and fabrics can improve the quality of the printed material, save time and reduce costly reprints. A properly seamed Awning or Pole Pocketed Banner/Billboard using the T3 EXTREME will provide your customers with a visually pleasing product.

6.4 The Main Operator

The T3 EXTREME requires at least one main operator who will be responsible for the operation and maintenance of the welder. The candidate should be a responsible employee and will need certain skills. He/she will be expected to be able to maintain the welder and perform a routine maintenance. This person will also be the communication link with our Support Department, and should be capable of phone-assisted problem solving and basic repair.

The main operator will be important to the operation of the welder, and should be selected with great care. The main operator should possess basic hands on mechanical aptitude & some very basic technical background.

6.5 Other Operators

In addition to the main operator, other operators will be required for more than one shift and as helpers. It is not necessary that these operators possess the skill level of the main operator. However, anyone working with the welder should show a mechanical aptitude and have some experience with seaming or sewing. It is important that the person have an eye for distinguishing between good seams and bad seams.

6.6 Goals for the Operators in Training

To understand all the controls and functions on your welder, understand and perform basic maintenance and to understand and be able to achieve a good weld for each type of material & to produce an end product in a timely manner.

Pre-Installation Document



Complete this page, sign & return to service@weldmaster.com.

This form must be returned before the welder can be installed. Please return this survey as soon as possible. Please answer the following questions completely and honestly:

Your Name:	E-mail:
Your Company:	Date:

1. Do you have the applicable power requirements? [Please see Serial tag for correct power connection](#)

16 amp Single Phase? <input type="checkbox"/> Yes <input type="checkbox"/> No	208-240 voltz, 50-60 Hz? <input type="checkbox"/> Yes <input type="checkbox"/> No
---	---

2. Is the welder at your facility? Yes No
3. Has the welder been removed from the shipping crate? Yes No
4. Is this air supply in place and connected to the welder? Yes No
5. Is this power source in place and connected to the welder? Yes No
If not when will it be installed? _____
6. Do you have adequate compressed air, as referred to in the guide? Yes No
If NO-when will this be available? _____
7. What is the measured incoming voltage of the electrical power source that will be connected to the welder? _____ volts Yes No
8. Is the machine to be installed requiring any special considerations for installation? Yes No
If yes what are they? _____
9. Will you provide all fabric & employees needed for proper training? Yes No
If no, please explain: _____



Who should we contact to schedule our installation/training visit with?

Name:	Position:
Phone:	Email:

Employee names/position being trained on MW machine

Name:	Position:
Name:	Position:

Your installation and training time are valuable. If you state that you have a power source, please ensure that it is connected prior to the MW Field Service Engineer is scheduled on-site. Any extra days required for the installation will be billed at our current shop rate per hour plus additional travel expenses.